


REAR TIP OVER BARS #KAW051
KAWASAKI CONCOURS
INSTALLATION REFERENCE PHOTO

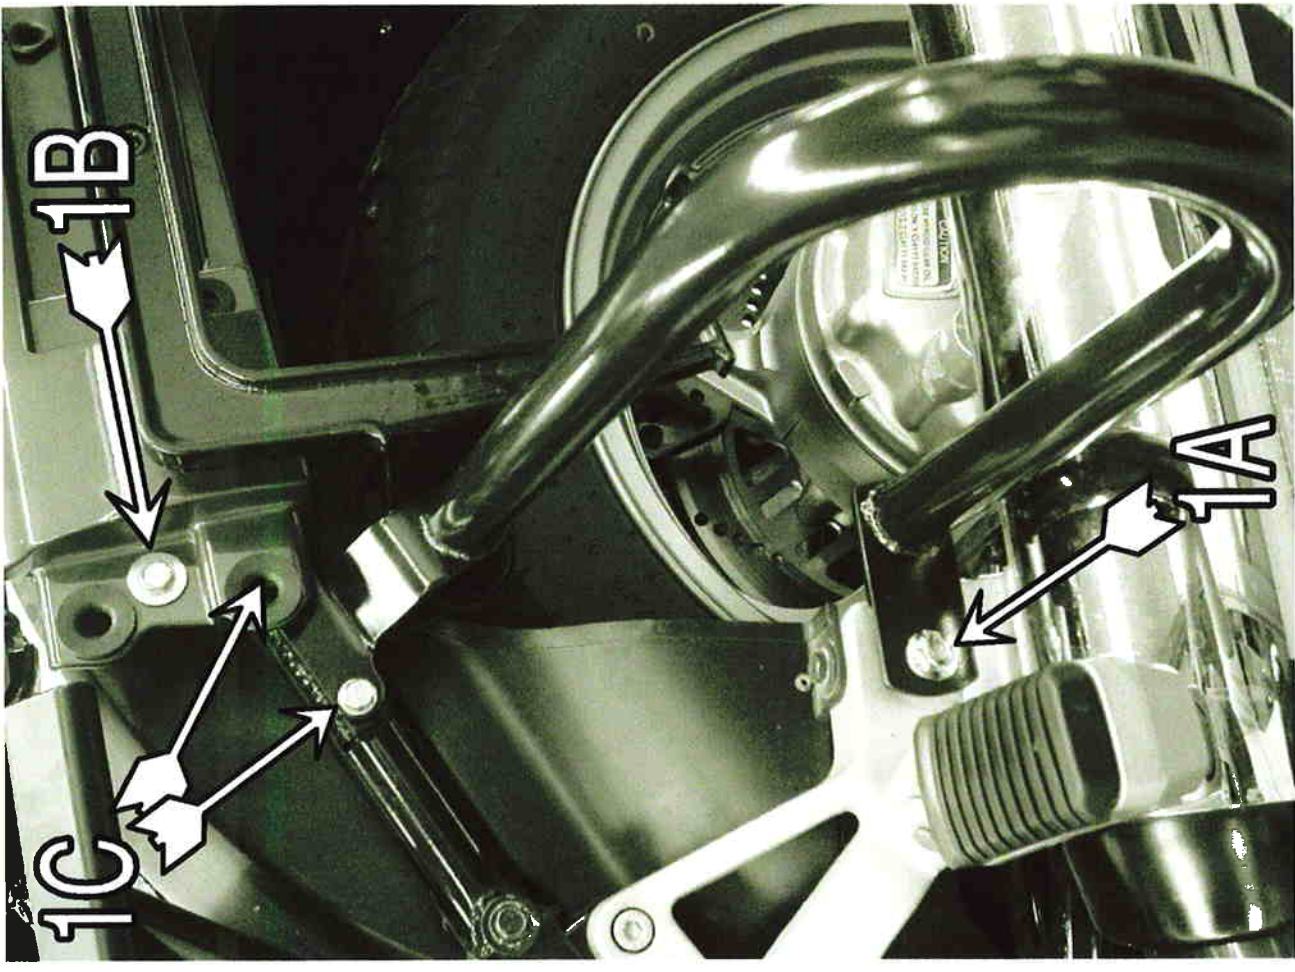

REAR TIP OVER BARS #KAW051
KAWASAKI CONCOURS
INSTALLATION REFERENCE PHOTO

REAR TIP OVER BARS - KAWASAKI CONCOURS
INSTALLATION INSTRUCTIONS - #KAW051

1. Remove the seat and saddlebags. Remove the side covers. (There is one screw located at the front, pull outward at the rear.) Remove the 10mm muffler mounting bolts (12mm wrench size), located just behind the passenger pegs. See photo 1A. Remove the 6mm bolts (10mm wrench size) between the upper and lower grommets that the side covers plug into. See photo 1B. Remove the two 6mm bolts on each side that attaches the saddlebag bumper brackets to the frame. The tail section plastic covers one of these and you will need to hold it outward while removing and replacing the bolts. See photo 1C. Wedging a small piece of wood between the frame and the tail section to hold it out will make this much easier.
2. Remove the rubber bumper from the original saddlebag bracket and install it inside the “U” of the rear tip over bar. Using the bolts from the original bracket, muffler bolt and nut, install the tip over bars and tighten all the fasteners securely.
3. Remove the wooden wedge. Reinstall and secure the side covers, seat and saddlebags.

These tip over bars are designed to protect the saddlebags in the event of a tip over while at a standstill. They are not intended to provide any crash protection for the rider or passenger at any speed!

**RIVCO Products, Inc. 440 South Pine Street
Burlington, WI. 53105 Ph 262.763.8222
rivcoproducts.com**

REAR TIP OVER BARS - KAWASAKI CONCOURS
INSTALLATION INSTRUCTIONS - #KAW051

4. Remove the seat and saddlebags. Remove the side covers. (There is one screw located at the front, pull outward at the rear.) Remove the 10mm muffler mounting bolts (12mm wrench size), located just behind the passenger pegs. See photo 1A. Remove the 6mm bolts (10mm wrench size) between the upper and lower grommets that the side covers plug into. See photo 1B. Remove the two 6mm bolts on each side that attaches the saddlebag bumper brackets to the frame. The tail section plastic covers one of these and you will need to hold it outward while removing and replacing the bolts. See photo 1C. Wedging a small piece of wood between the frame and the tail section to hold it out will make this much easier.
5. Remove the rubber bumper from the original saddlebag bracket and install it inside the “U” of the rear tip over bar. Using the bolts from the original bracket, muffler bolt and nut, install the tip over bars and tighten all the fasteners securely.
6. Remove the wooden wedge. Reinstall and secure the side covers, seat and saddlebags.

These tip over bars are designed to protect the saddlebags in the event of a tip over while at a standstill. They are not intended to provide any crash protection for the rider or passenger at any speed!

**RIVCO Products, Inc. 440 South Pine Street
Burlington, WI. 53105 Ph 262.763.8222
rivcoproducts.com**