


## Quick Detach Parade Flag Holder Part # PF1000

Note: To mount this to the motorcycle you will need to purchase a model specific mounting kit  
HWK010 – Trailer Hitch Mounting Kit  
HWK015 – 2008 and Older Harley Davidson FLH & FLT  
HWK020 – 2009 and Newer Harley Davidson FLH & FLT

1. Place one of the flat washers supplied onto each of the four ¼" button head screws supplied. If you are installing this using either of the Harley Davidson Mounting Kits (HWK015 or HWK020) refer to photo 1A for bolt locations. If you are mounting this using the Trailer Hitch Mounting Kit (HWK010) refer to photo 1B. Finger tighten all four bolts onto the rods.
3. Mount the flag holder socket (or sockets if you have purchased additional ones) using the ½" lock washer and washer placed onto the ½" x 1" bolt supplied. Insert the bolt from the bottom up thru the flag bar and thread it into the socket making it finger tight. Rotate the socket to the desired position to display your flag or flags as you like then tightening the bolt securely (15-25 ft. lbs.).
4. Insert the supplied chrome finishing plugs into any empty mounting holes you may have. It may be necessary to bend open the tabs on the bottom of the plugs to obtain a secure fit.

Proceed with instructions enclosed with one of the Mounting Kits listed above.

Additional flag holder sockets #PF920 can be purchased separately.  
We also offer Collapsible Flag Poles #PFPOLE and 3 x 5' American Flags #PFFLAG

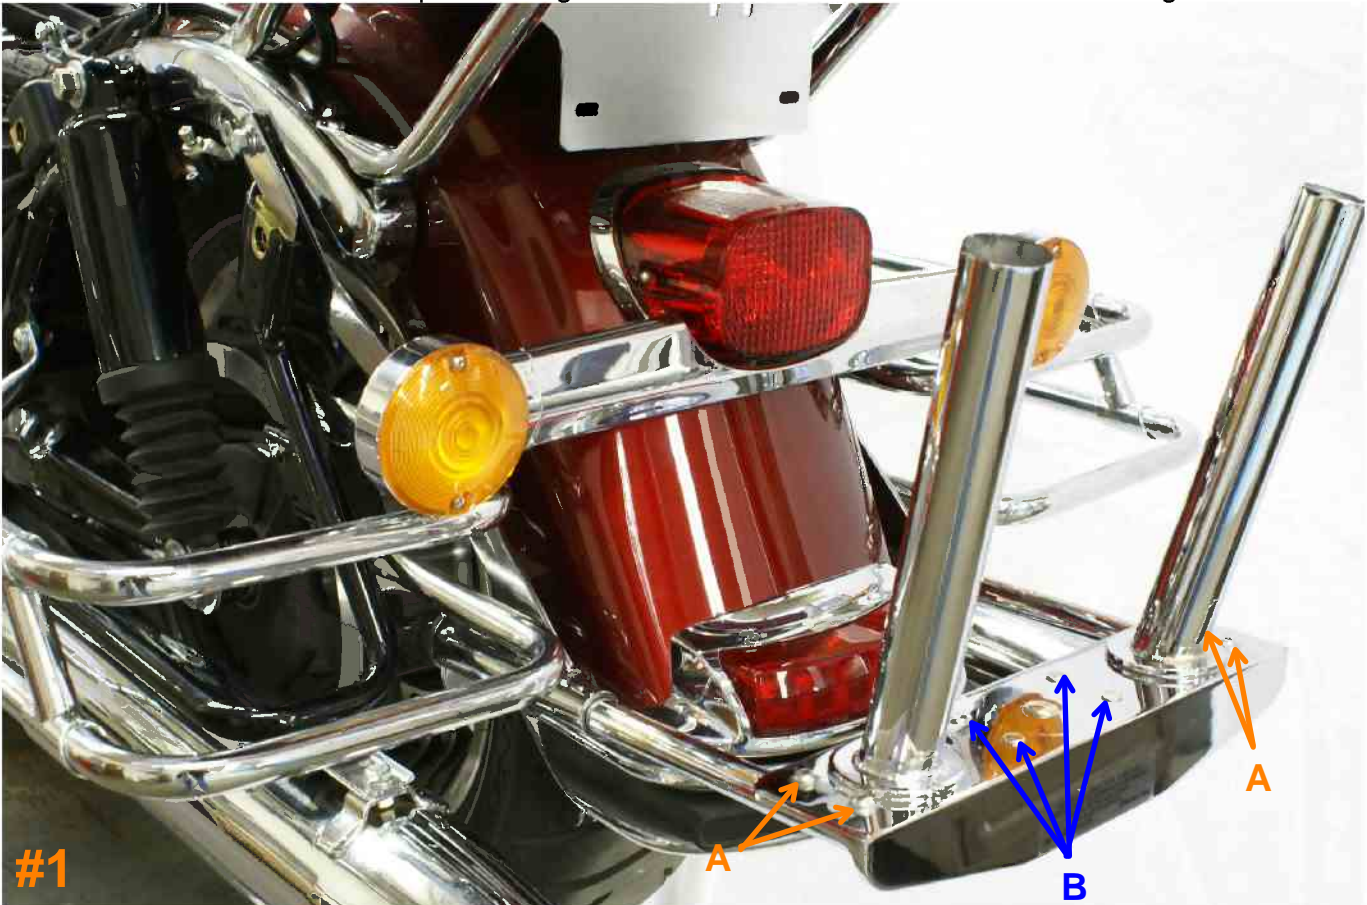

RIVCO Products, Inc.

440 South Pine Street  
262-763-8222  
rivcoproducts.com

Burlington, WI 53105