

Installation Instructions

RSV600 Mounting Kit

440 South Pine Street
Burlington, WI 53105
262-763-8222
rivcoproducts.com



RIVCO PowerMaster™ Muffler Mounting Kit

For use on Yamaha Royal Star Venture

RSV600

1. Lay out a towel or blanket off to the side of your work area to set down the saddle bag once removed. Starting on the Right Side. Remove the Four (4) M6 bolts holding on the saddle bag (Photo 1A). Remove the saddle bag and set aside.
2. Loosen the exhaust clamp.
3. Remove the M10 bolt that holds on the stock muffler and remove the muffler (Photo 2A).
4. Clean the head pipe with a scotch bright pad or steel wool to remove any exhaust build-up. Slip the provided muffler clamp onto the muffler then slide on the head pipe.
5. Loosely attach the long bracket on the stock muffler mount (Photo 3A) threading the stock M10 bolt into the threaded end of the bracket. Then use the 5/16 hex head bolt and lock washer (provided with muffler) to attach the clearance hole end onto the muffler mount (Photo 3B).
6. Attach the short bracket to muffler mount using the 5/16 bolt and lock washer (provided with muffler) (Photo 3C). Line up the small clearance hole with the saddle bag mount (Photo 3D).
7. Tighten the M10 bolt to the stock muffler mount.
8. Reinstall the saddle bag using three (3) of the M6 stock saddle bag bolts and one (1) of the provided M6x50mm bolts in the rear outside hole (Photo 1B). Tighten until snug.
9. Slip the supplied vibration damper over the bottom of the M6 stud then the bracket followed by the M6 washer and finally the M6 locknut. Tighten the locknut until you see the proper amount of bulge from the dampener (Photo 4A).
10. Tighten the 5/16 bolts on the muffler.
11. Rotate the exhaust clamp until the bolt is unobtrusive and tighten.
12. Repeat steps 1-11 on the Left Side.


#1



#2



#3

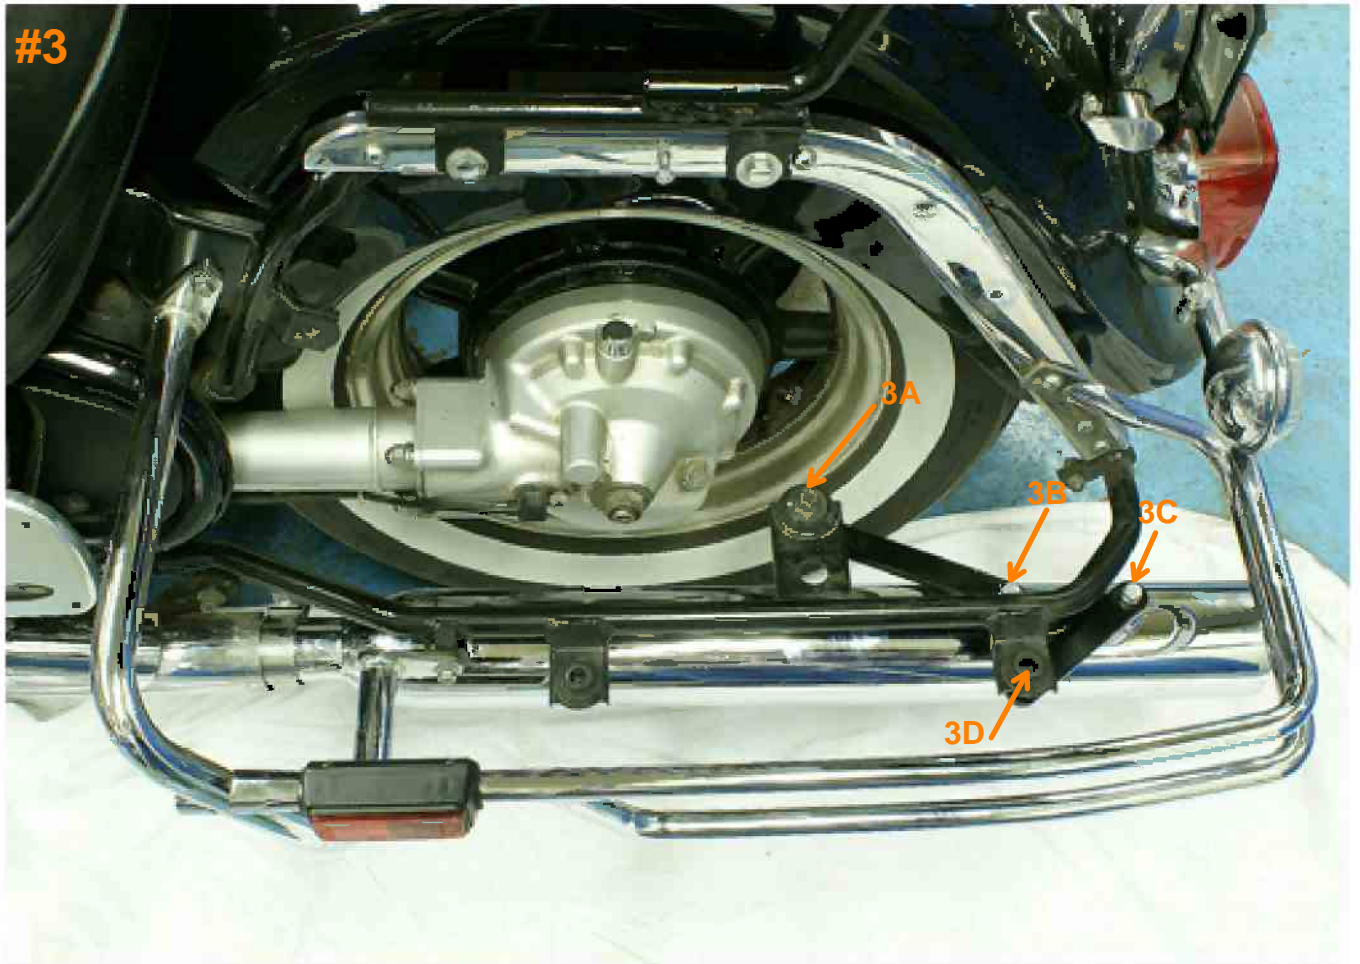

#4

