

**SUPER BRIGHT BRAKE LIGHT #SBRKL
(L.E.D. Brake Light Installation Instructions)**

1. Find a suitable mounting location. NOTE: the light pivots on the 2 end mounts (feet)
2. Place masking tape or duct tape on the surface where you want to place the feet. Holding the light in place, trace around the feet with a pen or pencil. Remove the feet from the curved arm of the light. Locate over the traced outline. Drill two (2) 3/32" holes through each foot and body of the motorcycle. NOTE: locate the holes inside the foot diagonally i.e. 1 upper left and 1 lower right.
3. Remove the tape from the body: remove the backing from the adhesive strip on the bottom of the feet. Carefully locate over the screw holes and press in place firmly. Install screws in feet.
4. Attach light bar to feet. NOTE: snug screw securely but be careful not to over tighten.
5. Connect the small electronic brake/taillight module to the motorcycles taillight and the new light as follows. Connect the black wire from the light to a suitable ground wire or the motorcycles frame. Connect the red wire to the single red wire on the wire module. Connect the other red wire to the motorcycles brake light wire and the orange wire to the taillight wire. Turn on the ignition and test the functions of the light.

RIVCO Products, Inc.

440 S Pine Street Burlington, WI 53105
262.763.8222 rivcoproducts.com


**SUPER BRIGHT BRAKE LIGHT #SBRKL
(L.E.D. Brake Light Installation Instructions)**

1. Find a suitable mounting location. NOTE: the light pivots on the 2 end mounts (feet)
2. Place masking tape or duct tape on the surface where you want to place the feet. Holding the light in place, trace around the feet with a pen or pencil. Remove the feet from the curved arm of the light. Locate over the traced outline. Drill two (2) 3/32" holes through each foot and body of the motorcycle. NOTE: locate the holes inside the foot diagonally i.e. 1 upper left and 1 lower right.
3. Remove the tape from the body: remove the backing from the adhesive strip on the bottom of the feet. Carefully locate over the screw holes and press in place firmly. Install screws in feet.
4. Attach light bar to feet. NOTE: snug screw securely but be careful not to over tighten.
5. Connect the small electronic brake/taillight module to the motorcycles taillight and the new light as follows. Connect the black wire from the light to a suitable ground wire or the motorcycles frame. Connect the red wire to the single red wire on the wire module. Connect the other red wire to the motorcycles brake light wire and the orange wire to the taillight wire. Turn on the ignition and test the functions of the light.

RIVCO Products, Inc.


440 S Pine Street Burlington, WI 53105
262.763.8222 rivcoproducts.com

SBRLK WIRING DIAGRAM

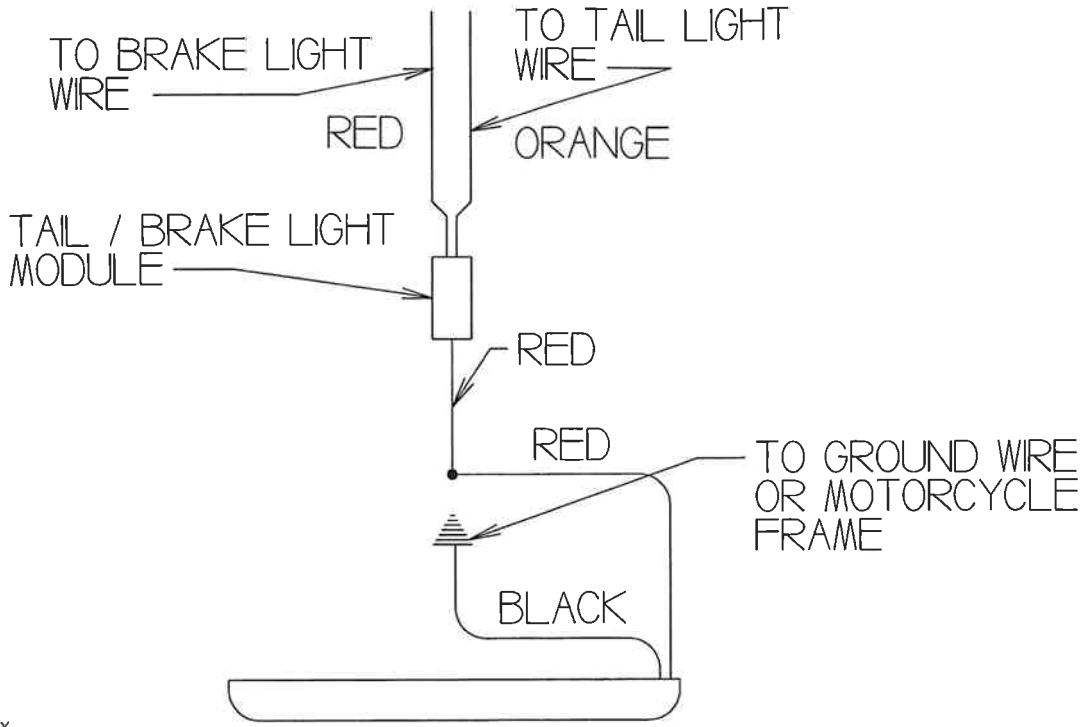

inch

SBRLK WIRING DIAGRAM

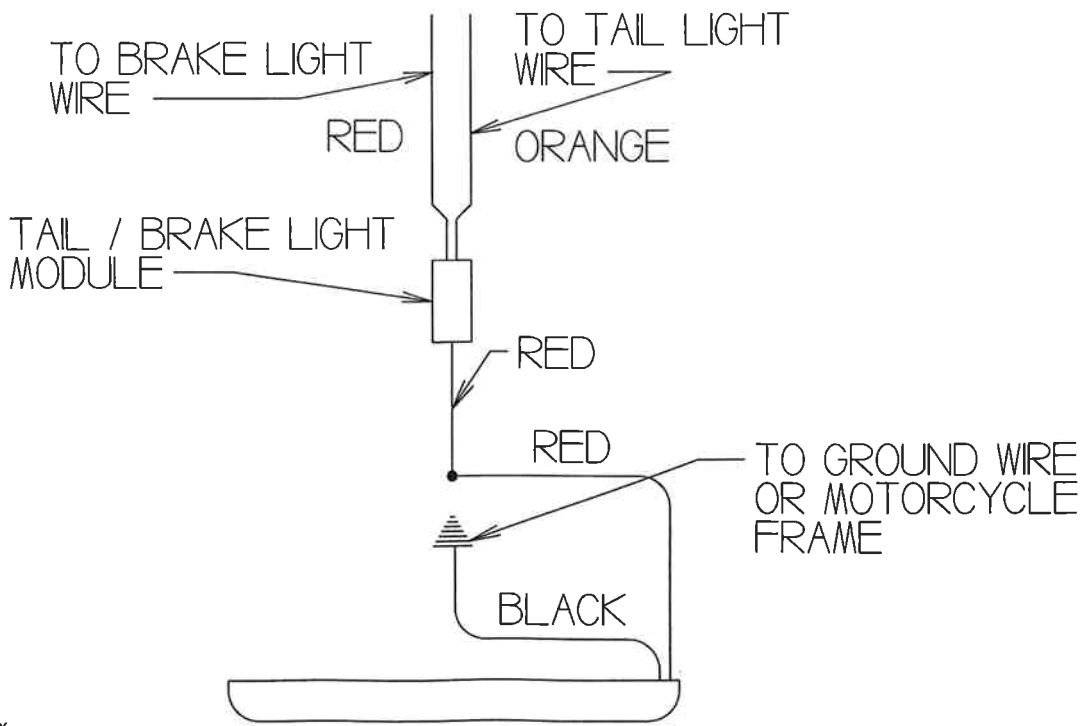

inch