


**TRIUMPH ROCKET III PASSENGER FLOOR BOARDS
#TR3005 AND LINK ARMS #TR3005-5
INSTALLATION INSTRUCTIONS**

1. Beginning on the right side, remove the nut from the back of the passenger peg. Remove entire peg assembly.
2. Remove the new floorboards and spacers from their packaging. Notice the left and right markings on the backside of the mounting plates.
3. Install spacer (supplied) where the original peg was mounted as shown in Figure 1.

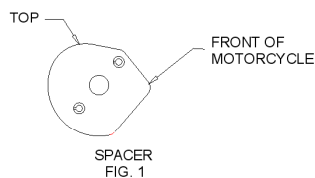

(Right Side Shown)

Note: If also installing with optional link arms (part #TR3005-5) skip step 4 and go onto step 5.

4. Install right floorboard. There are two sets of alignment holes on the floorboard mounts. Align the floorboard so that it is horizontal or parallel to the ground. Place the allen bolt (supplied) from the outside through the floorboard mount, spacer, and original footpeg mounting hole. Place a flat washer, lock washer and nut (supplied) onto the bolt. Tighten securely. Repeat for left side.
5. Notice the L & R markings on the link arms. Install the right link arm so marking is facing inward and the threaded hole is facing toward the front of the motorcycle. There are two sets of alignment holes on the link arms. Align link arms in desired (upper or lower) position. Place the 5/16 x 2 1/4" bolt (supplied) from the inside through original footpeg mounting hole, the spacer, and the link arm. Tread the acorn nut (supplied) onto the bolt. **TIGHTEN BOLT FROM THE INSIDE WHILE HOLDING THE NUT STATIONARY!** Tightening from outside may cause damage to the chrome on the link arm.
6. Insert two of the four dowel pins (supplied) into the dowel pin holes on the link arms which allow the floorboard to be level or parallel to the ground. Install the right passenger floorboard onto the link arm. Place the 5/16 x 3/4" allen bolt (supplied) into recessed hole of floorboard mount and thread into the link arm and tighten securely.
7. Repeat for left side and re-check hardware for tightness.

Rivco Products Inc.
440 South Pine Street Burlington, Wisconsin 53105
262-763-8222
www.rivcoproducts.com