

IR094TP (Black pads) and IR094TP (tan pads)

For 2015 and newer Indian Roadmaster with hard trunk

1. Referring to photo (1A) open the trunk lid. Using a piece of coated electrical wire or heavy cord tie from the rail behind the trunk to the latch on the lid so that there is some slack in the cables that stop the lid (1B).
2. Remove the eight 6mm screws (2A &B) that hold the backrest pad and stop cables to the lid, remove the backrest and set it on the seat. Note that on the two screws that attach the cables there is a washer used here.
3. Starting on the right side loosen but do not remove the four 10mm bolts (2C) on the lids upper hinge. Locate the right armrest assembly. The armrests mounting bracket will replace the backing plate (2D) of the upper hinge as seen in photo (3). It may be helpful to have a helper hold the lid up in place or the armrests while you are replacing the backing plate with the armrest.
4. While supporting the lids right side remove the four 10mm bolts and the backing plate (2C). Hold the armrest up in place aligning the holes in it with those in the lid. Place the four 10mm thru the upper hinge and lid then thread them into the holes in the lid. Align the remaining upper hole in the hinge and lid with that on the armrest then tighten the four 10mm bolts securely (6-8 ft. lbs.).
5. Install the left armrest to this point in the same manner.
6. Replace the backrest pad six screws (2A). On the ones the connect the lid stop cables place the screw thru the cable eyelet followed by a washer then thread it into the lid. Use the two supplied 6mm screws (4mm hex) in the remaining holes at (2B). Tighten all eight screws securely (3-5 ft. lbs.)
7. Remove the wire or cord installed in step 1.

NOTES:

- The tension can be adjusted on the pivots using the knurled knob and or the supplied wrench on the flats below the knurl of the knob.
- The arms can also be removed for trips without a passenger by unscrewing and removing the knurled knob and its attached hinge pin.
- The pads and chrome base ovals can be move forward or back, inward and outwards. To adjust them remove the screws at the bottom of the chrome oval and remove the pads. Remove the base from the arms. Notice there are several set of holes in the arms to move them forward and back. Also the bases can be rotated 180 degree to move them inward or outward as desired.
- There is a cup holder bracket supplied and located on the bottom of the right oval base.





RIVCO Products, Inc.

440 S. Pine St., Burlington, WI. 53105

262-763-8222

To register your warranty and see many other cruiser and bagger accessories, please visit our website.

www.rivcoproducts.com

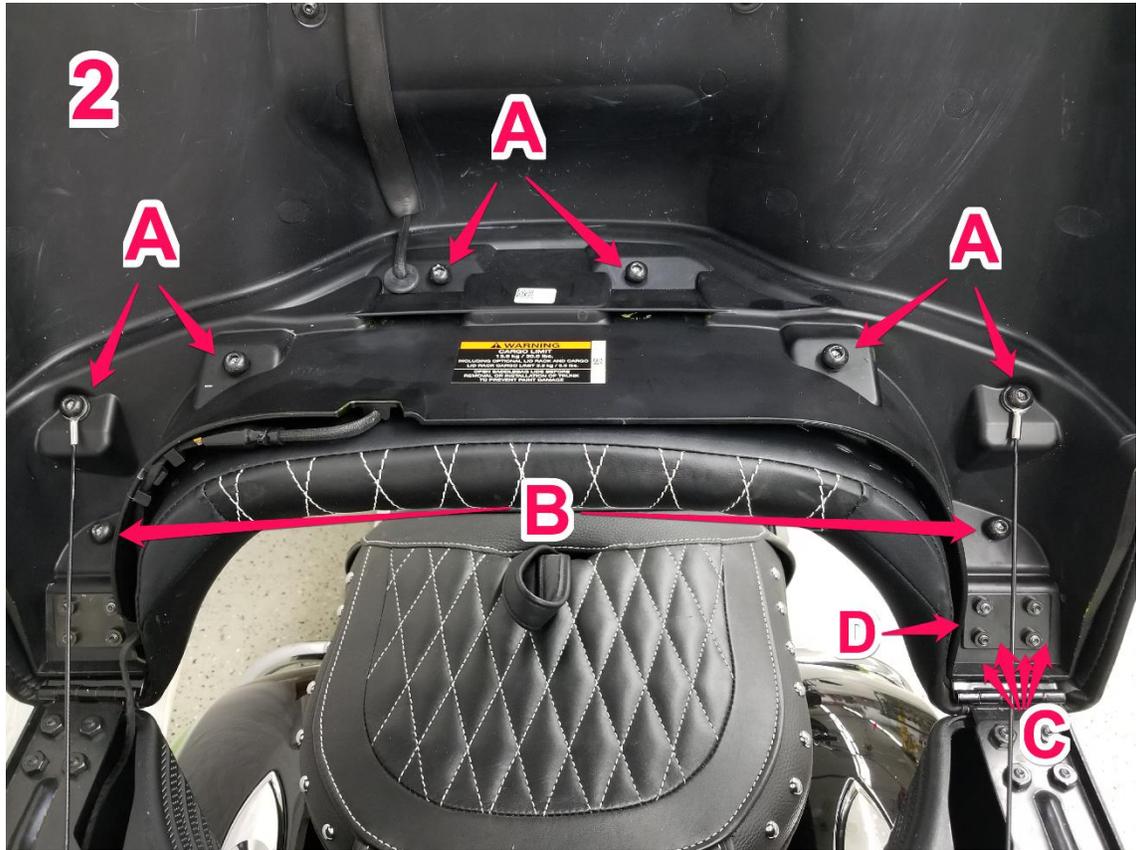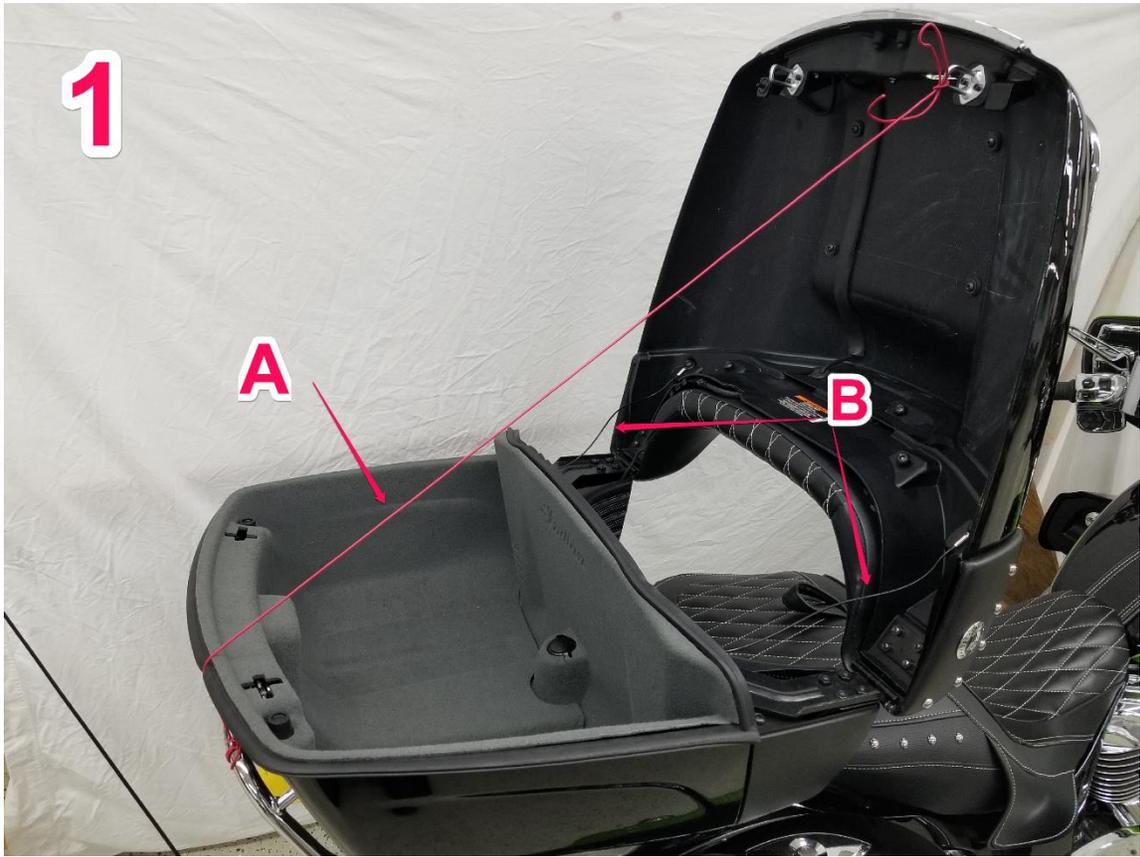

3

